
INSTALLATION INSTRUCTIONS Phoenix Surface Slider


COMPONENTS

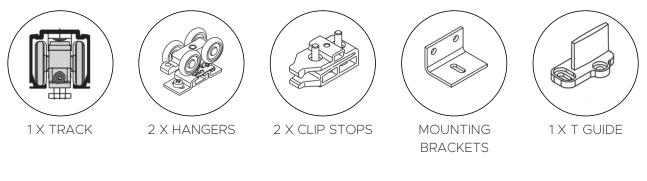


The aluminium track may be fitted directly to the lintel, in single or multiple lines, or face fitted to the lintel using a single line of brackets.

Fascia accessory with end caps also available on request.

Hangers come standard with a steel bracket and four nylon tyred wheels with precision bearings. Clip stops provided but can be upgraded to a soft close device for improved operation.

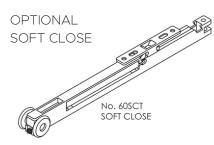

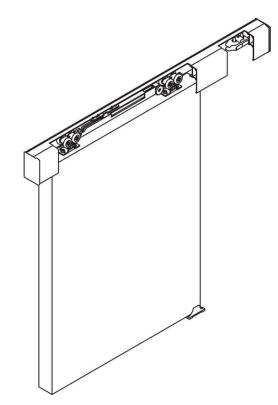




triline.net.au

1. FIX TRACK

Ensure the track is mounted parallel to the floor. Soffit Fix: position 8g screws first 50mm in from each end and then every 450mm approx centres.

Face Fix: use L shaped bracket (see qty chart below)

Track Length	2000mm	3000mm	4000mm	6000mm
Bracket Qty	5	8	10	15

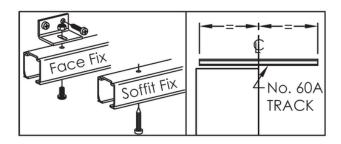

100

2. ATTACH HARDWARE TO PANEL

Hanger mounting plates should be positioned centrally to panel thickness.



Insert hardware into track.

With the latch on the mounting plates open, bring door up to hangers and push hanger bolt into plate. Close latches when bolts are in the plates.

4. ADJUST PANEL

Screw bolt in or out of hanger to adjust panel height. Adjust height so panel is square.

 
5. FIT GUIDE

 
Locate at opening jamb. With panel hanging plumb fix guide to the finished floor.


6. FIT CLIP STOPS OR SOFT CLOSES

Clip Stop - 1 each end. Outer screws fixing. Inner screw adjusts strength of clipping. Soft close - install as per INST60SCT.

1300 239 206





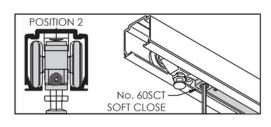


Product imporovement is a continuous process & specifications are subject to change without notice. © COPYRIGHT 2024 E&OE

2

sales@triline.net.au

 triline.net.au



20

ł

8



- ! -

100

