

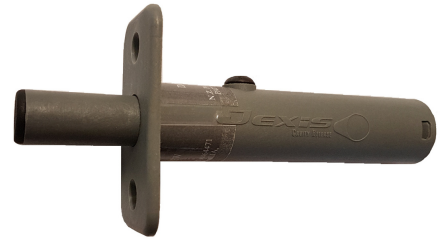
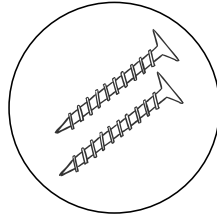


Pocket Door Release

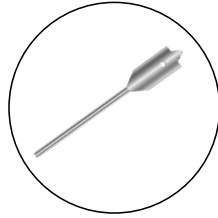

REQUIREMENTS

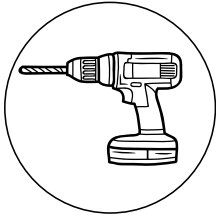

INSTRUCTIONS


- 1 IMPORTANT:**
You will need to remove the rubber bumper screwed to the rear post of the cavity unit as this will no longer be required with the cavity release installed.

To ensure door edge sits flush with the split jambs reduce your door width by buzzing 5mm off the back edge.


DO NOT set the face plate into the doors edge as this may impede the loading and release cycle of the door ejector.

Also, do not adjust body screw, this is a guide screw only pre-set in the manufacturing process.

- 2** Mount 1200mm up from the bottom of your door, with a hole depth of 100mm.
- 3** Mark the door using a 25mm speed bore bit and drill a hole to the depth of 100mm. As per option A.
- 4** On particularly narrow doors with minimal clearances, an alternative options would be to drill a 22mm hole and use a round rasp to cut some extra clearance. As per option B.
- 5** Firmly push the cavity door release into the drilled hole and secure with two screws. Your door will now be ready to install into your cavity.

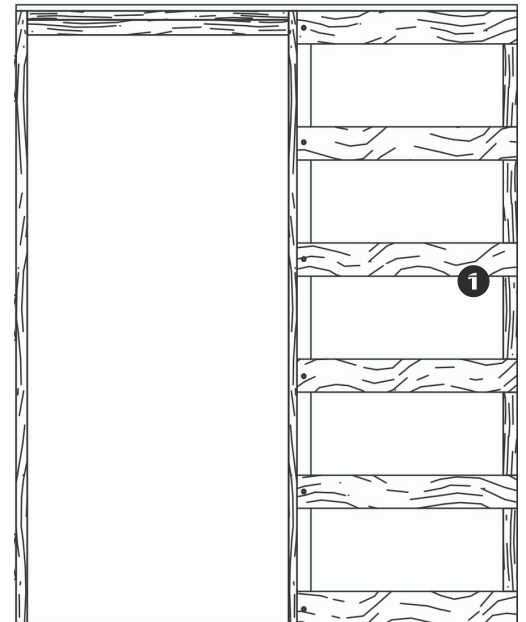

35MM + DOOR THICKNESS

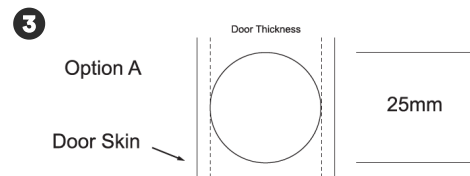

34MM OR LESS DOOR THICKNESS

